 
 


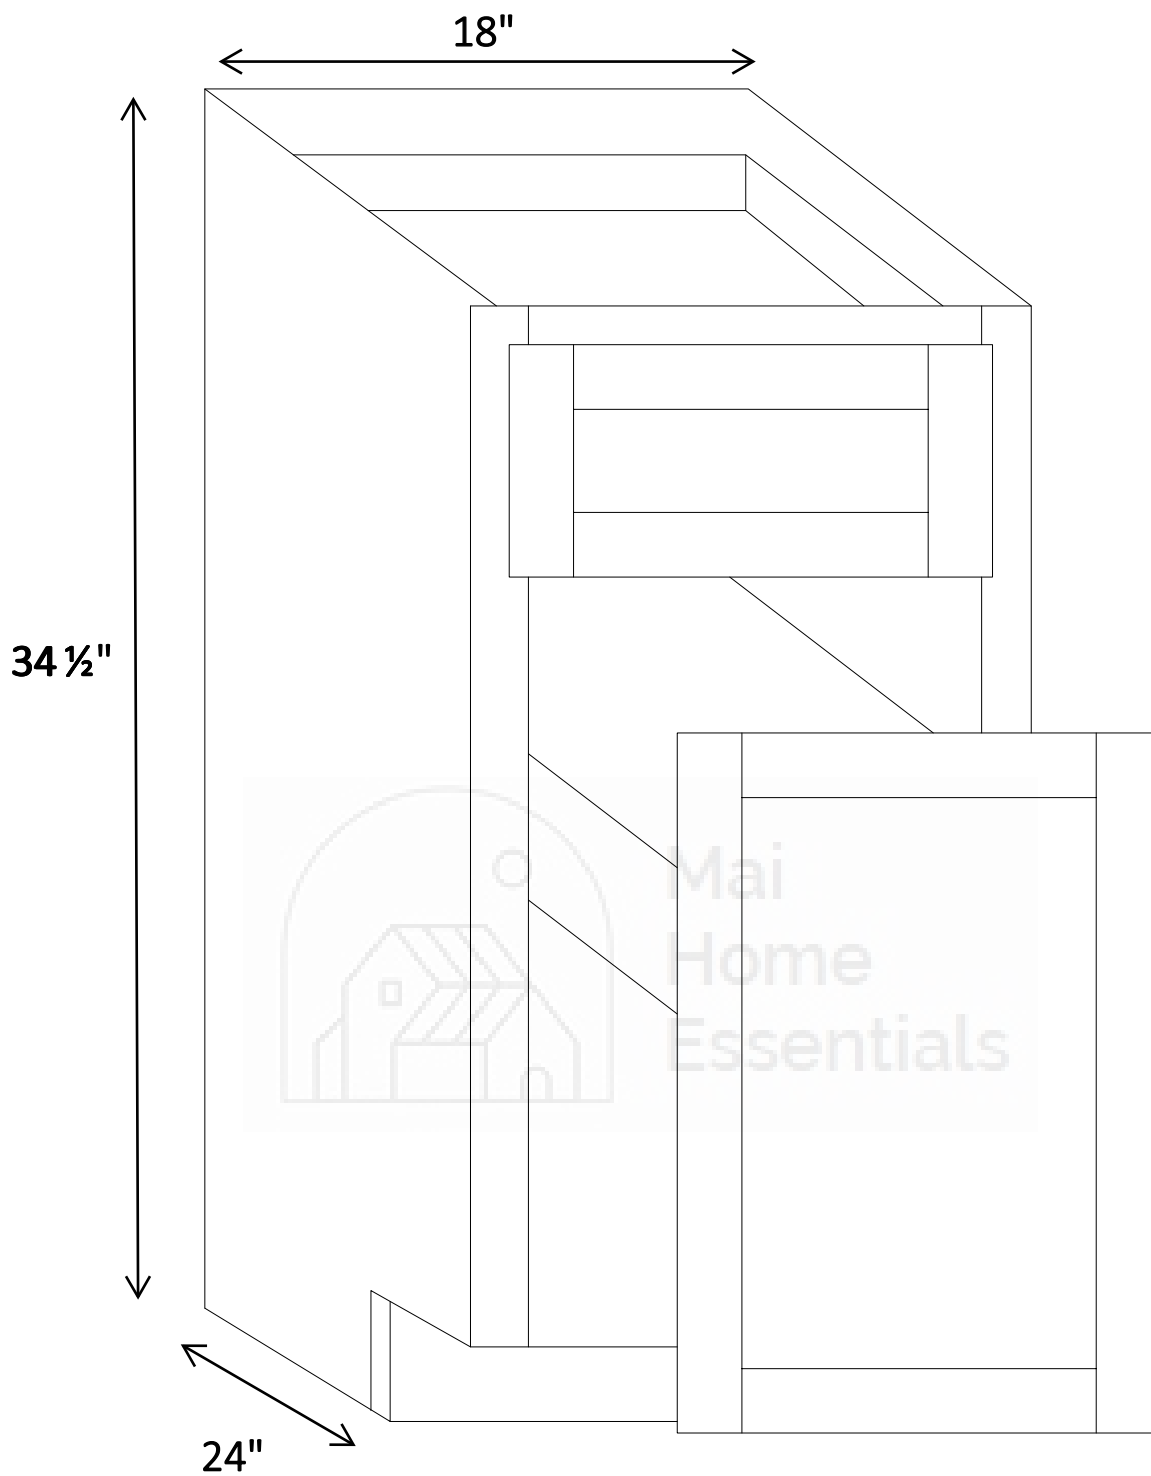

BWB18

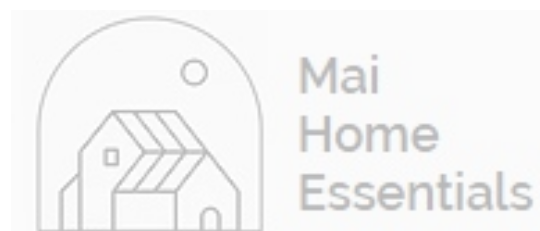 





SB24、SB27、SB30




Mai
Home
Essentials

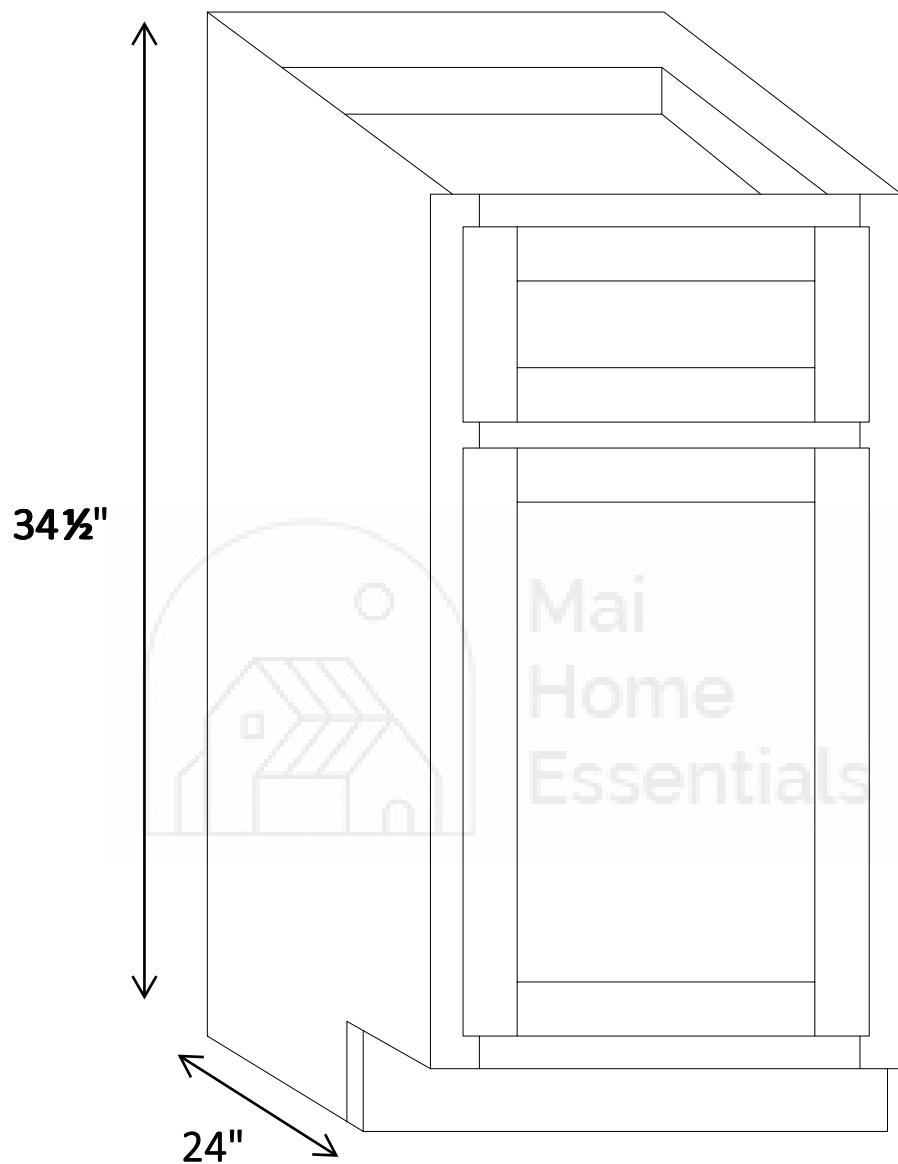


B9、 B12、 B15、 B18、 B21

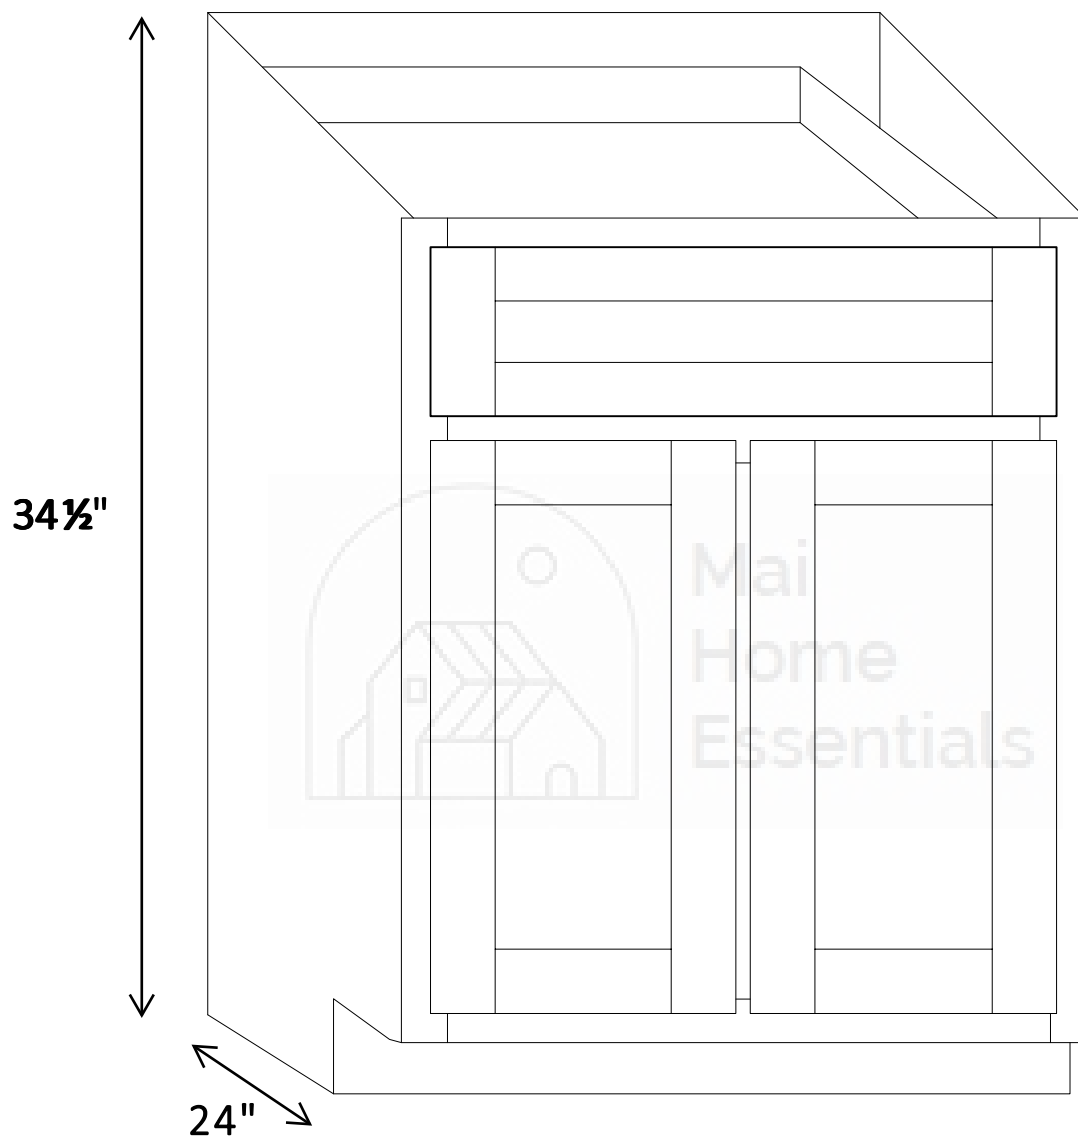 


B24、 B27、 B30

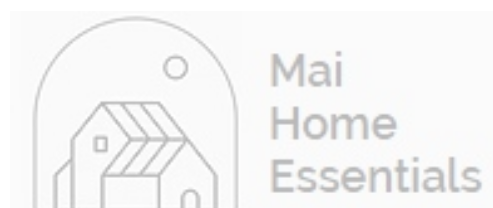 

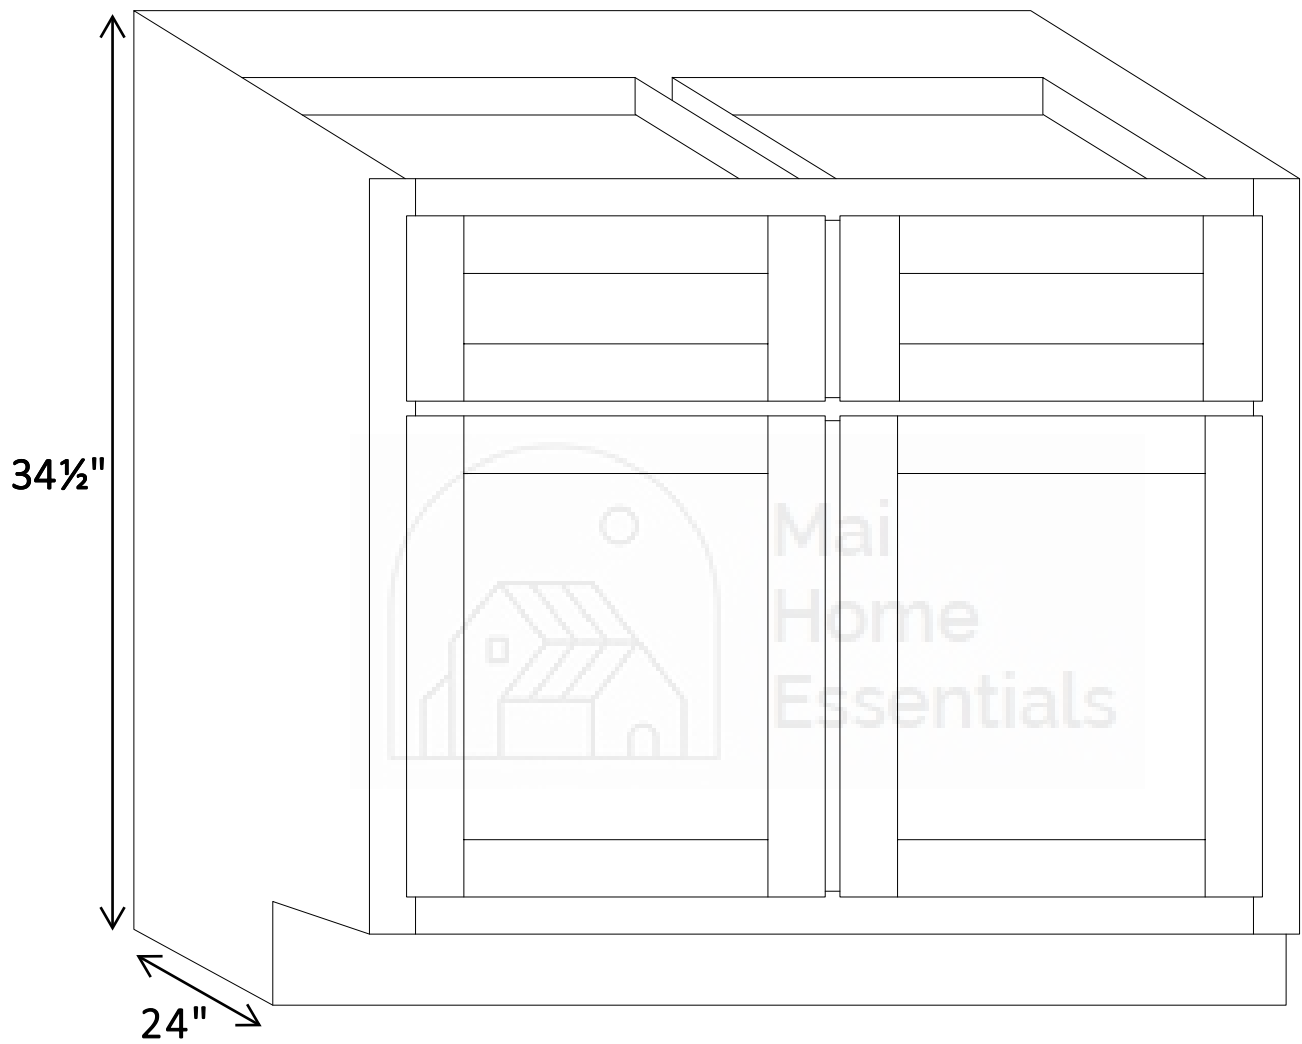 



B33、B36



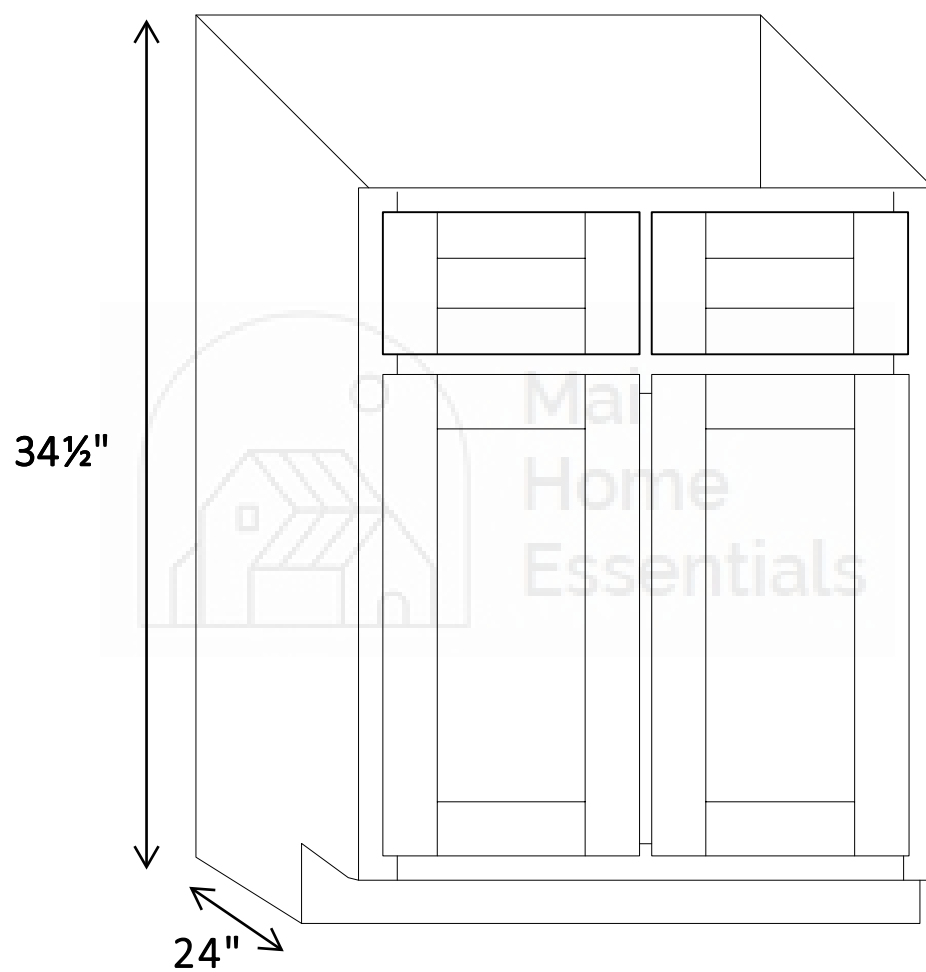 


SB24、 SB27、 SB30、 SB33、 SB36

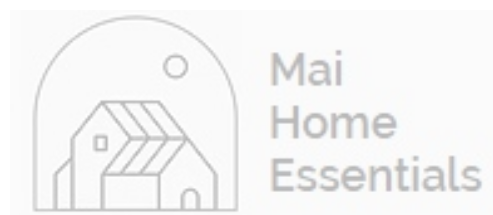 


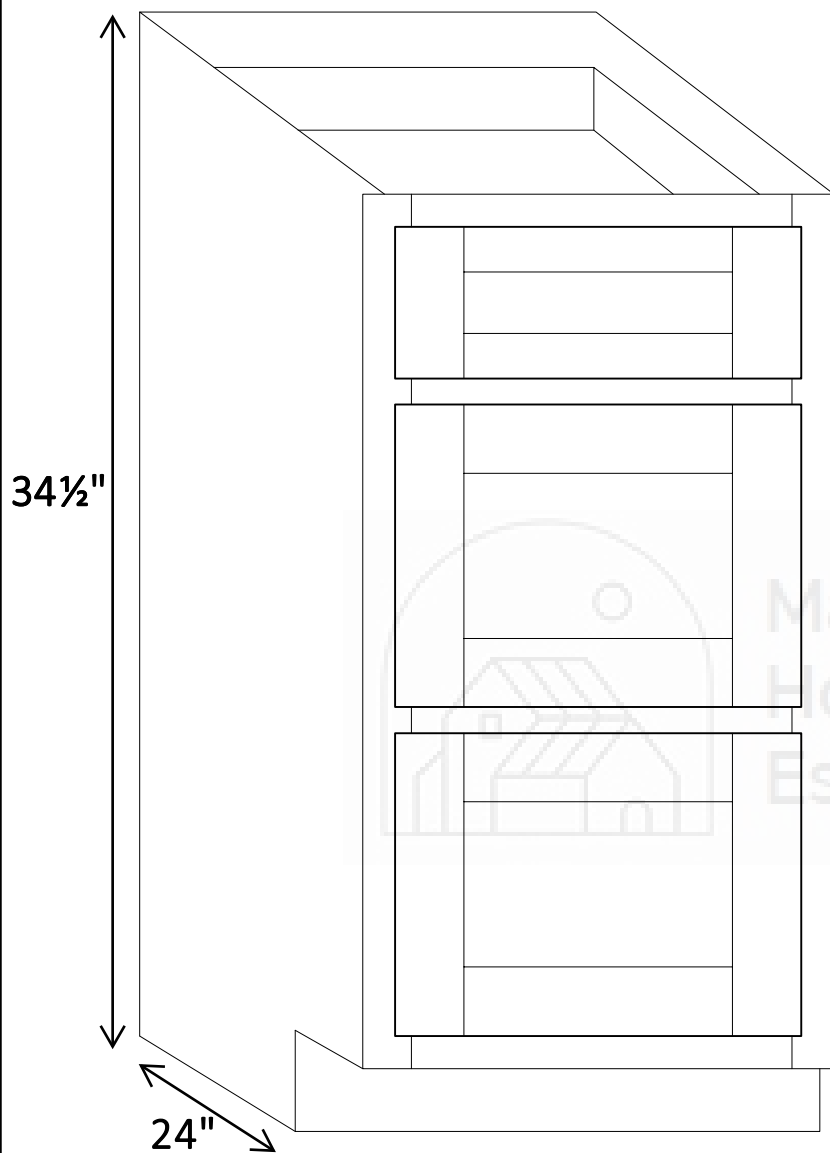 


3DB12、3DB18、3DB24

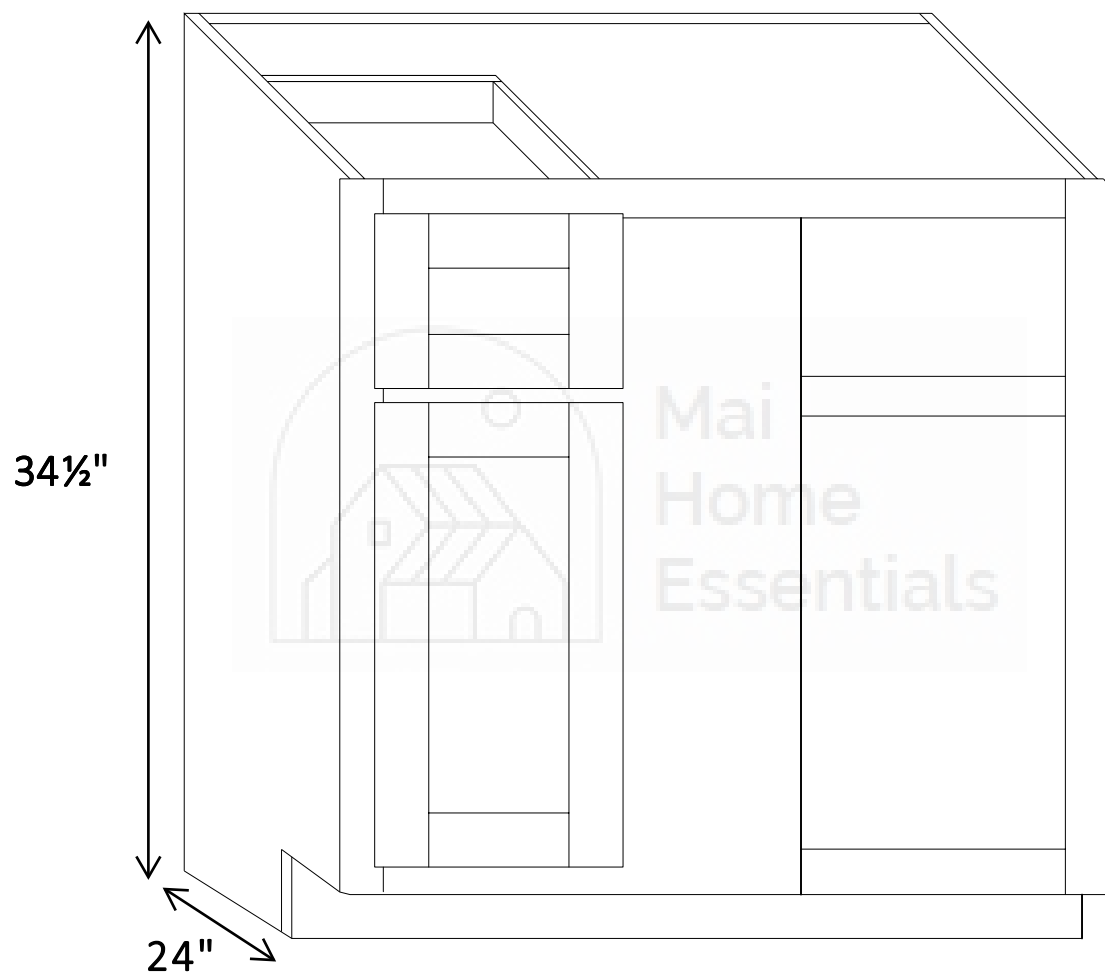 


BBC36

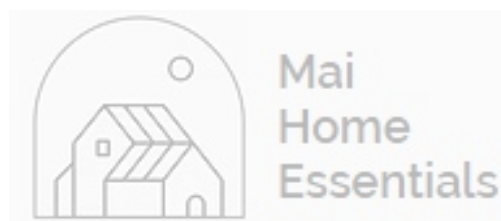 

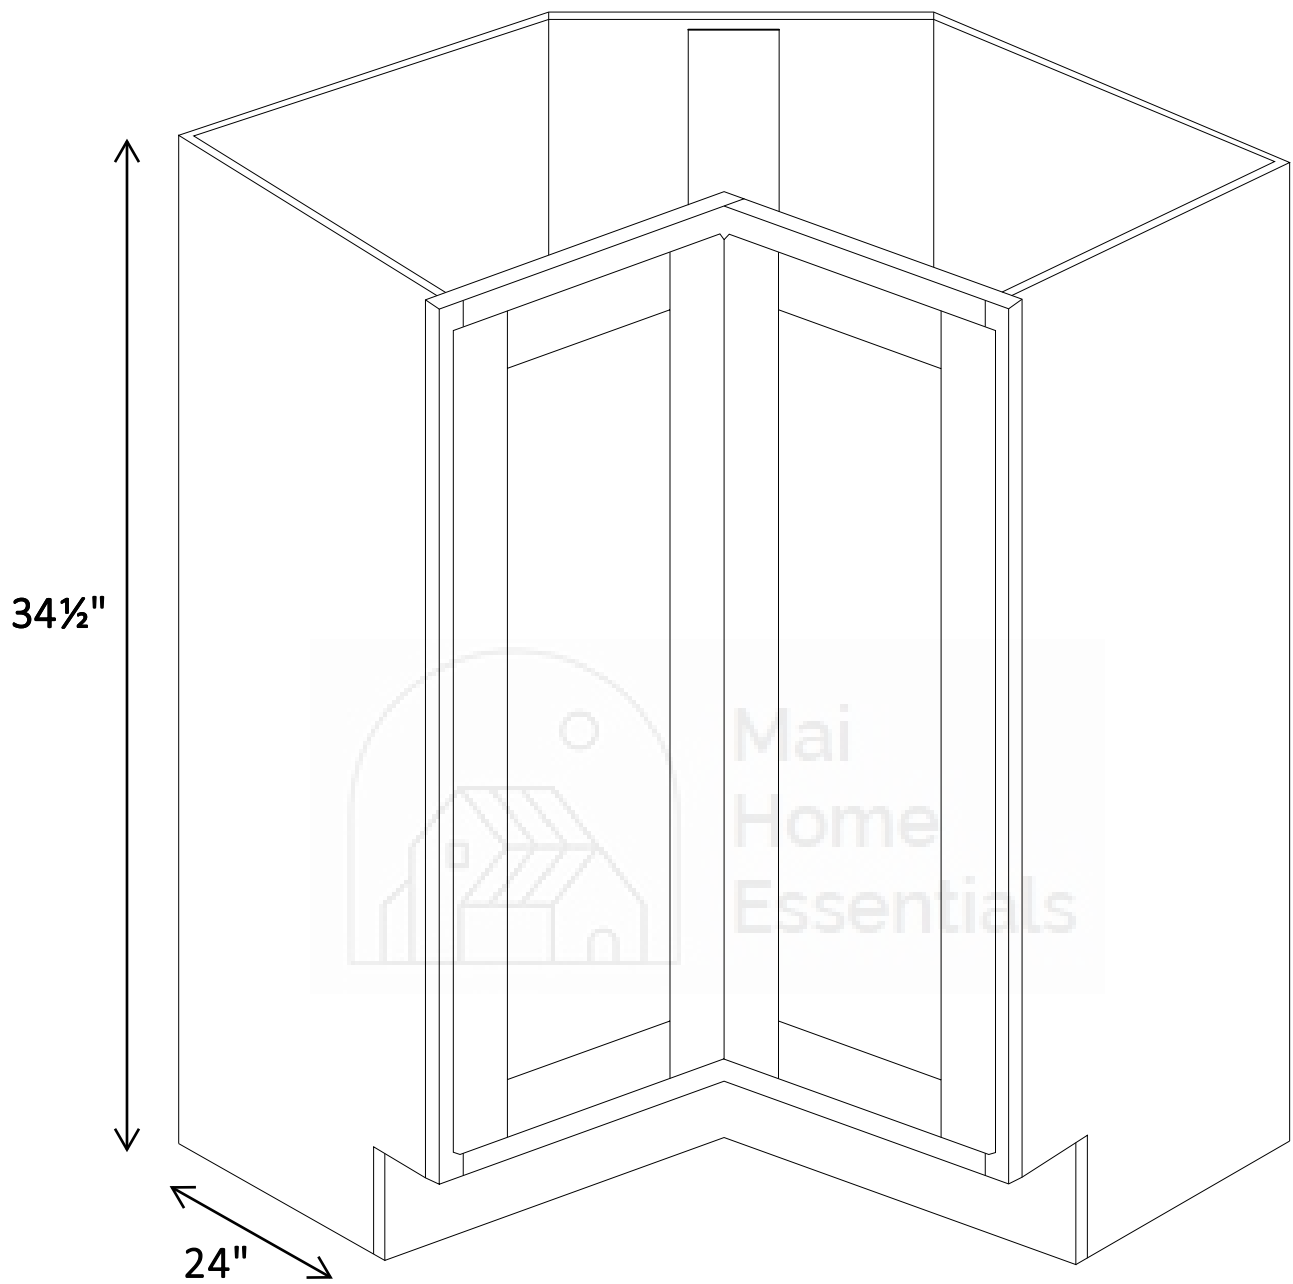 

ERB36

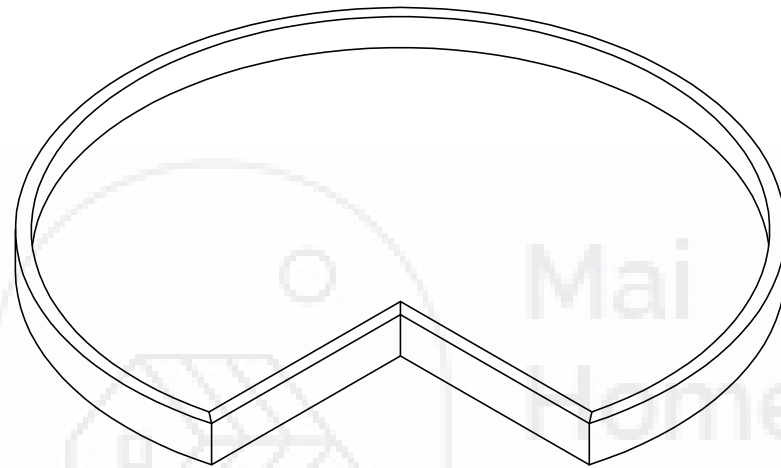 


33"Wood Basket

36"Wood Basket



 
Mai
Home
Essentials

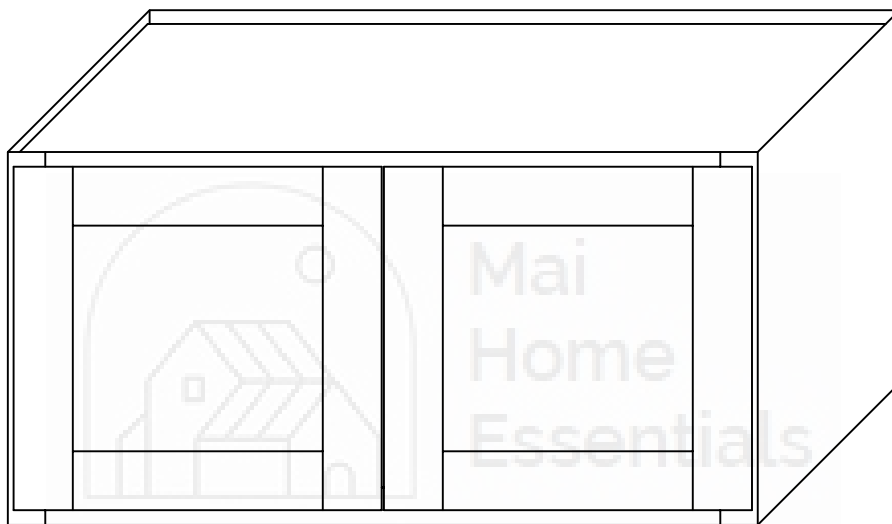


W3012、 W3015、 W3018、 W3024、 W3030
W3612、 W3615、 W3618、 W3630
W2424、 W2430



 
Mai
Home
Essentials

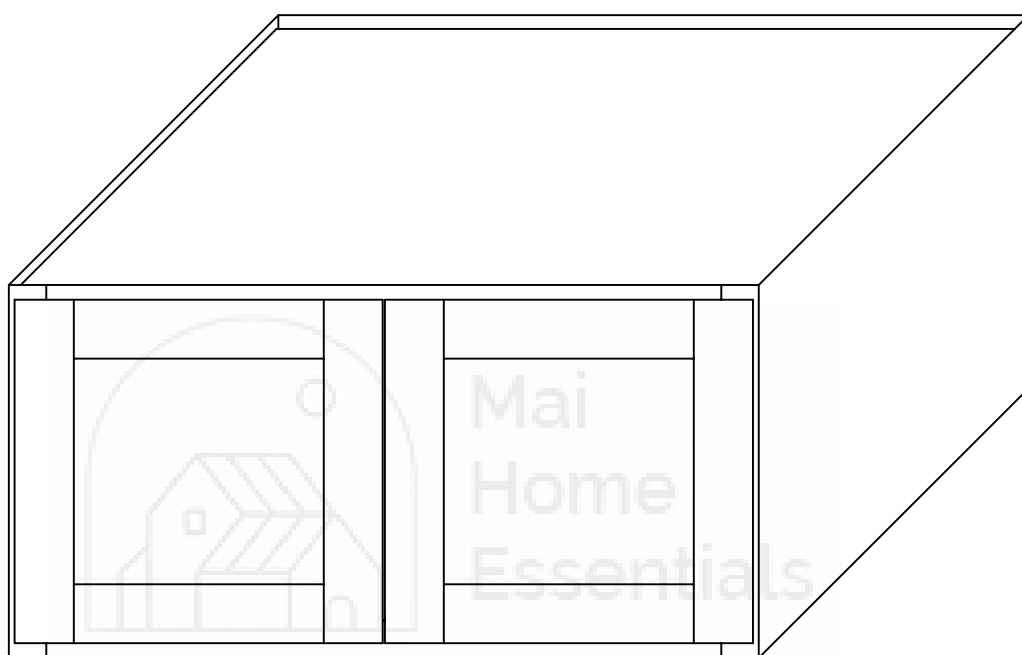


W301224、 W301824

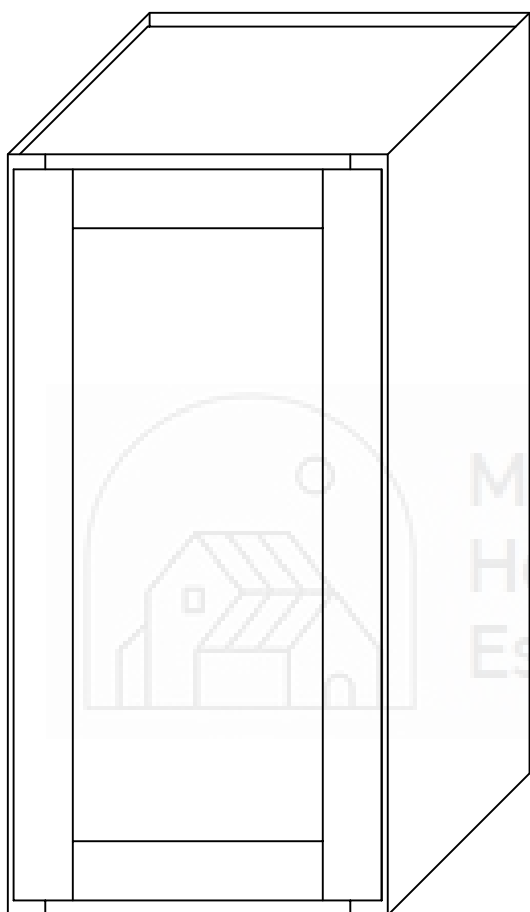 

 W0930、
W1230、 W1236、
W1530、 W1536、
W1830、 W1836

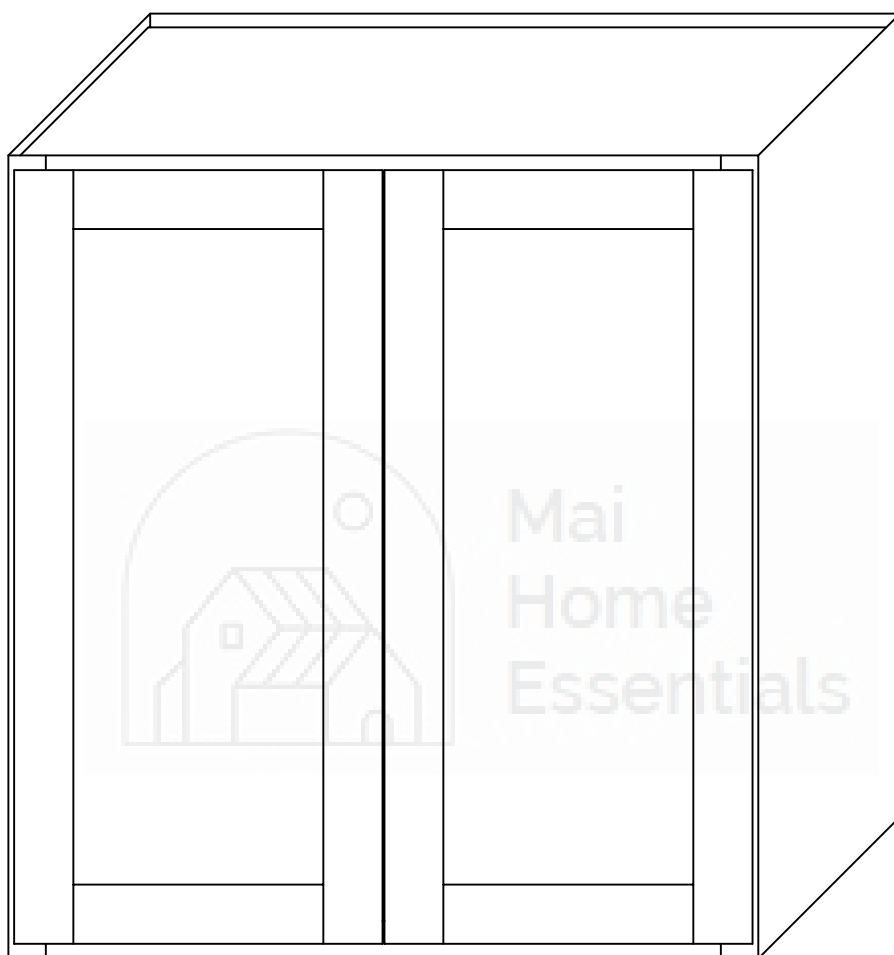

W2430、 W3030
W3630、 W2436

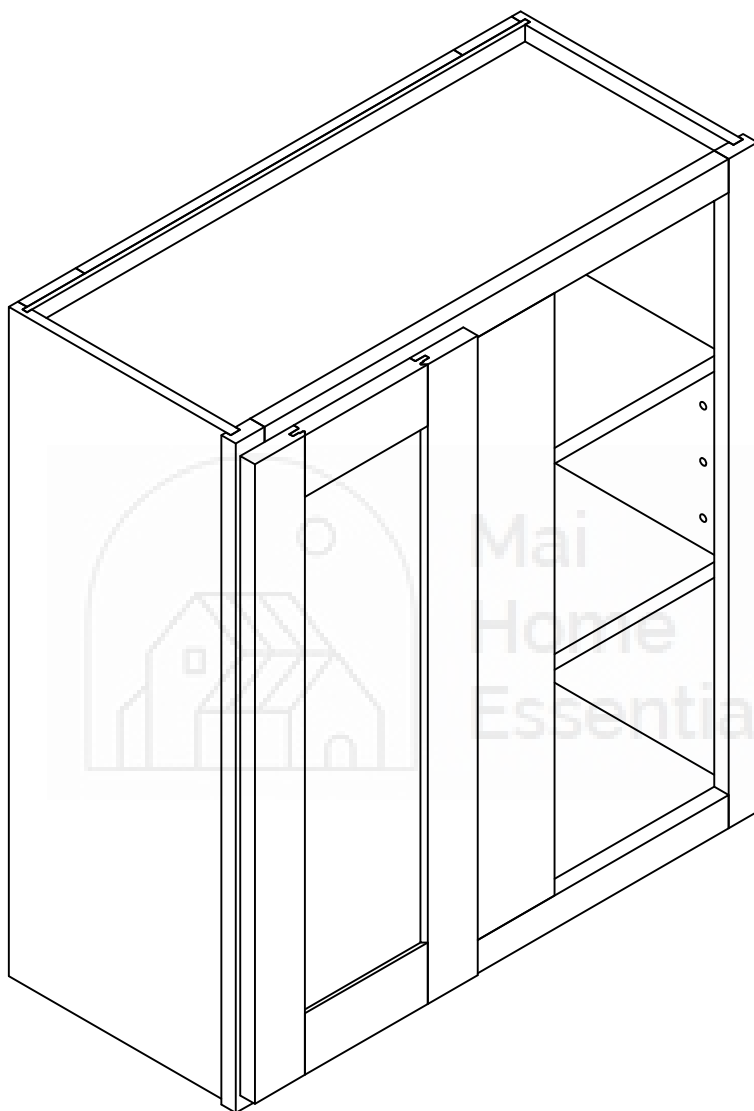 

WBC3630